

# How to use ZK series Management tool


## Connect the IoT with PC by serial cable

>> see For ES400 SOP - install SIM card and configure network parameters


For EB100 SOP - install SIM card and configure network parameters

## Open ZK\_Series\_Manage\_Tool, and follow the steps:

1. Choose the right COM
2. Input password, default is 'ZK102' or 'Okai'
3. Click the button 'Try to Connect'
4. Waiting for successful connection, and make sure it shows 'Success'
5. Click 'OK'

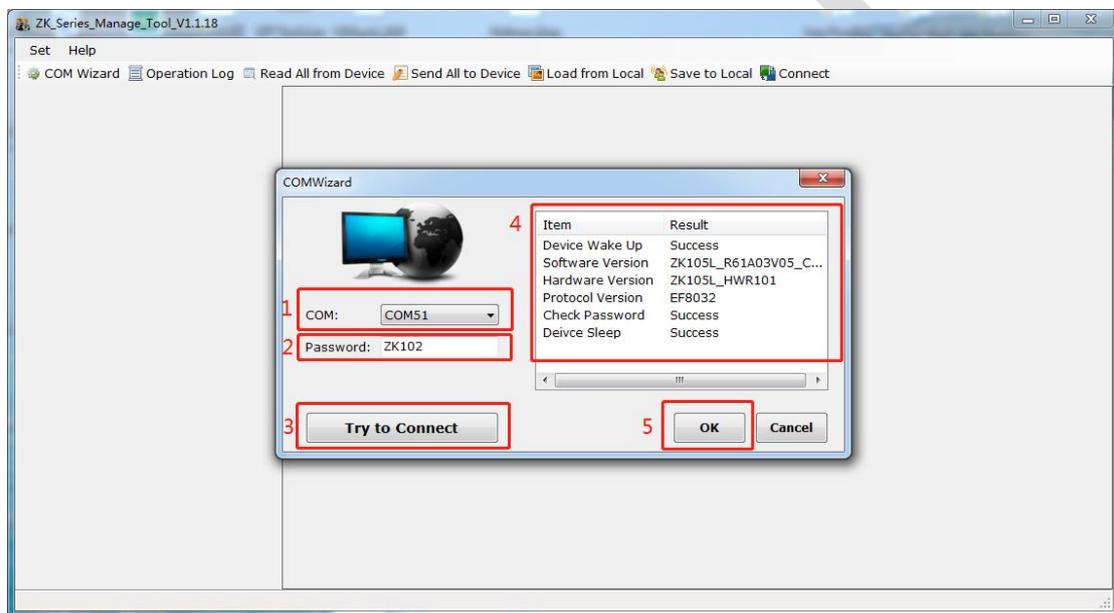


If password failed, it's under normal mode, and you cannot do any configuration.

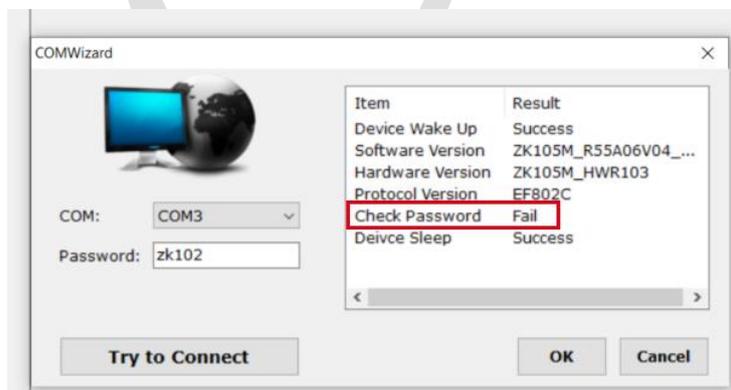


Solution: switch the mode.

If you see the password error, it's under test mode, just use the right password and enter in.

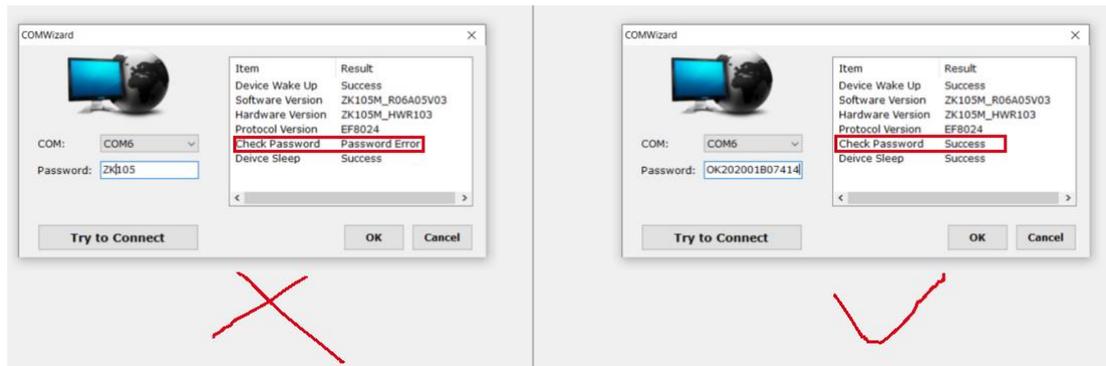


Solution: check the password and use the correct one.

If it says "Device wake up fail", then the cables are not connected correctly

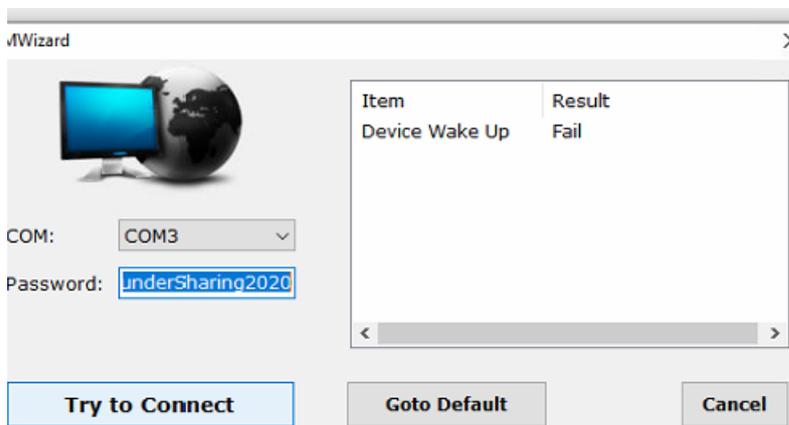


Solution: check the cables, connect them by the SOP mentioned at the beginning.

If the MT\_Tool closed automatically every certain mins or cannot be open, plz download the drive PL2303-Prolific\_DriverInstaller\_v1200 on your PC

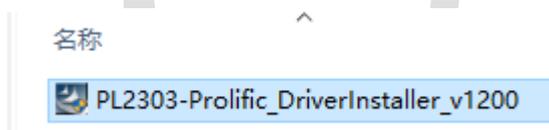


Each time you switch the IoT, you need to re-enter into the Tool by click COM Wizard

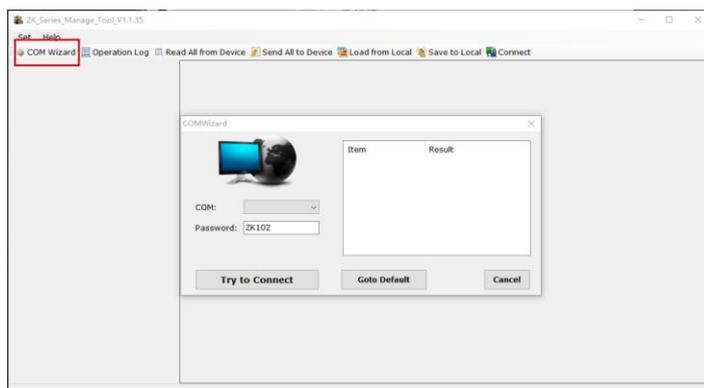

## How to send commands


Press "Ctrl + L" to enter in the command window, and then ↵

1. Input the command↵
2. Click "Send"↵

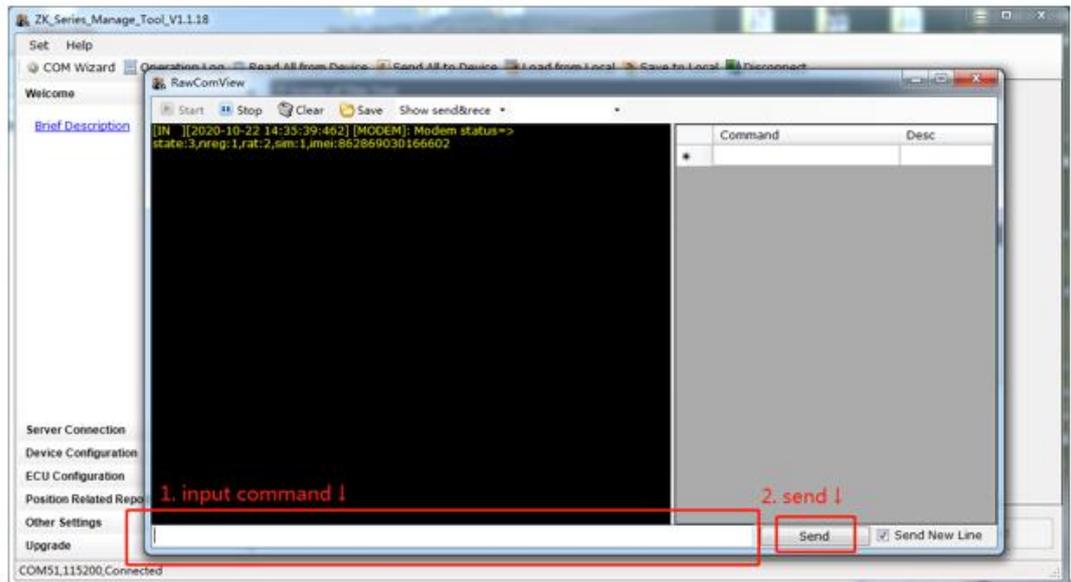

## How to send RTO.command

Click "Other settings", then click "Real\_Time\_Operation", then choose "sub command"

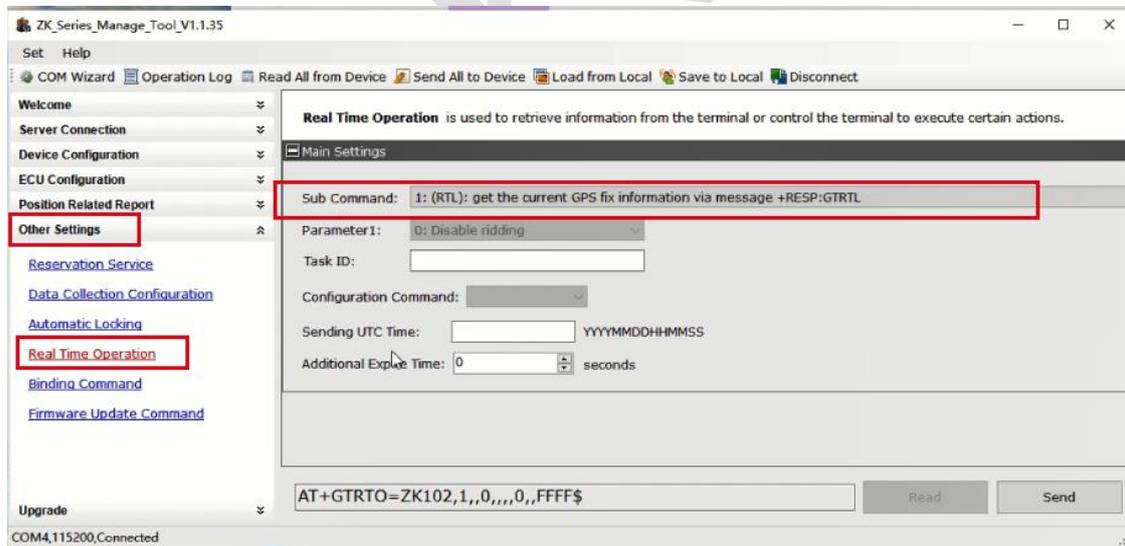

## How to get configuration

Click “read from all”, and then click “save to local”

